

STRINGING INSTRUCTIONS



Specifications

- Headsize: 105 in²
- Swing Weight: 285
- Weight: 280 g / 9.9 oz
- Balance: 33.5 cm / 3 pts. Head Light
- Length: 27.25 in
- Cross Section: 23-25.5-23 mm
- String Pattern: 16 x 19
- Power Level: 1150
- Item #: 7TQ27

String Instructions

1-Piece Stringing
Length: 38' LGTH x 9' SS.

Mains
Start M's at head. M's skips are 7H, 9H, 7T and 9T. No shared holes.

Xcrosses
Start X's at 7H. Bottom X: 7T.


Tie Off
M's at 8H. X's at 8T.

2-Piece Stringing
Length: 21' mains x 19' crosses.

Mains
Start M's at head. M's skips are 7H, 9H, 7T and 9T. No share holes.

Xcrosses
Start X's at 7H. Bottom X: 7T.

Tie Off
M's at 8H. X's at 10H and 8T.

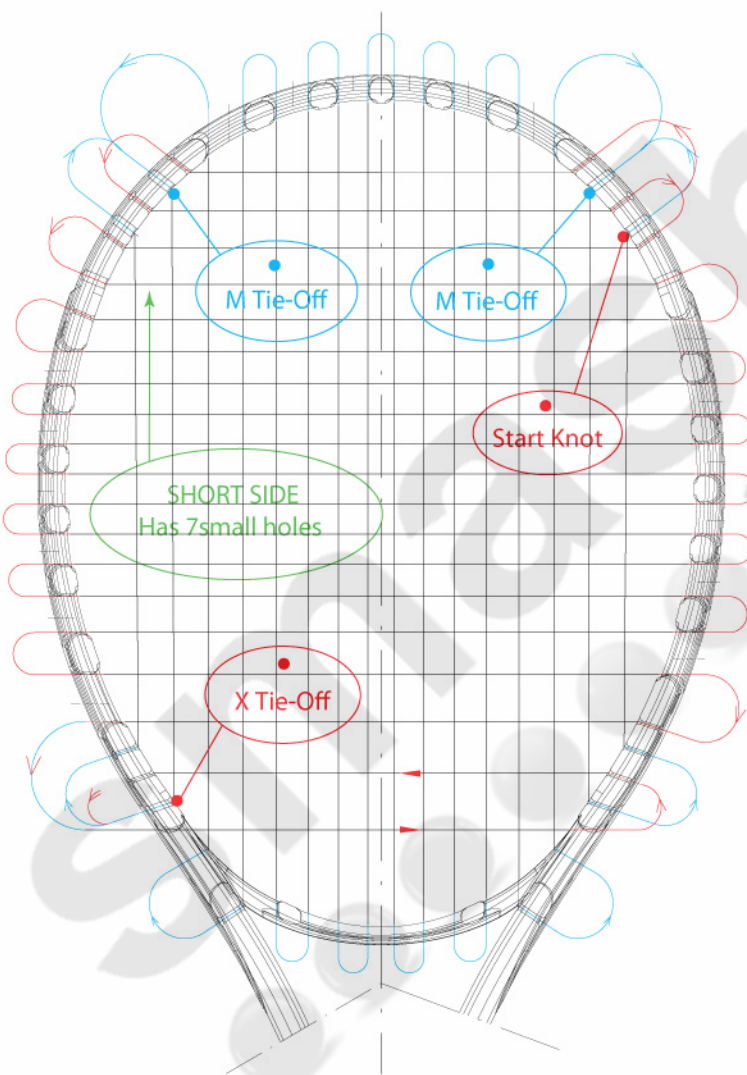

{ Important } Do not bend or flex the compressed carbon fiber Energy Bridge

Requires X's to be installed from the top on all racquets. Installing crosses starting from the bottom will void the warranty. Refer to the attached pdf of stringing instructions for each string recommendation.


Prince Boomerang Tool

Note that when tensioning the upper cross strings in the first 4 upper “EXO³ Ports” there is a tendency for the racquet to rotate. This may cause the string that is being tensioned to move toward the previously tensioned cross string. This can be prevented by using the boomerang tool. Another option is to use the brake on the machine to prevent the racquet from rotating.




STEP 1 Pass the string through the EXO³ Port

STEP 2 Insert the Boomerang tool into EXO³ Port

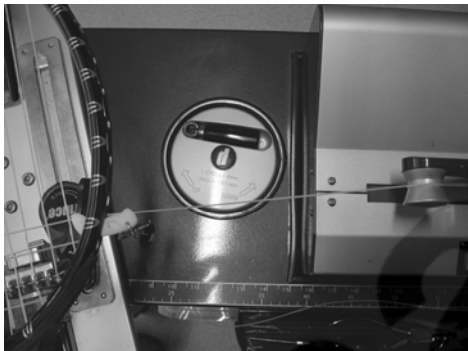

STEP 3 Pass the string into the groove on the “Boomerang Tool”

STEP 4 Pull the string

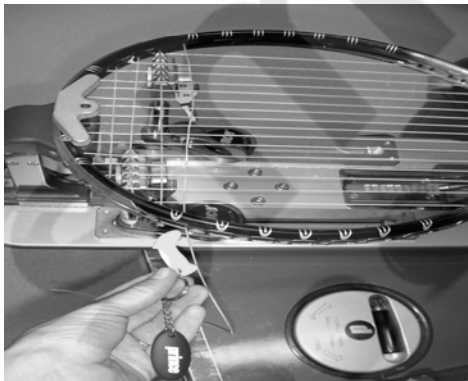

STEP 5 Clamp the string as usual

STEP 6 Release the tension and remove “Boomerang Tool”

Please use the red boomerang for the EXO³ Red and the silver boomerang for the EXO³ Silver.

prince[®]
rule the court[®]